 
Mounting instruction







IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. The luminaire is not allowed to be placed in the water or close to fire resource and high temperature place.
- 2. Before installing this fixture or doing any maintenance, make sure to turn off the power
- supply at the circuit breaker or fuse box.
- 3. Make sure that the luminaire is not damaged before install and use. If the glass is broken or damaged it must be replaced.
- 4. Only the authorized electrician can install the luminaire, and the wire should comply with the national standards.
- 5. The input cable: 3 cores with the min cross-sectional area of the conductor 1.5 mm². Recommended type H07RNF. The input cable should meet requirements of IEC 60227 or IEC 60245.
- 6. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent in order to avoid a hazard.
- 7. Check to make sure that all the fixture connections have been properly made and the fixture is grounded to avoid potential electrical shocks.
- 8. The light source of luminaire is non-user replaceable. It can only be replaced by the manufacturer or his service agent.
- Caution, Risk of Electric Shock. Disconect all power sources before servicing.


MAINTENANCE OF LUMINAIRE

Maintenance of luminaire must be done accorrding the standard CIE 154-2003. Recommended period of maintenance - every 3-4 years.

Cleaning must be done with soft material and soapy water.


Do not use agressive chemicals or solvents!

Product dimensions:

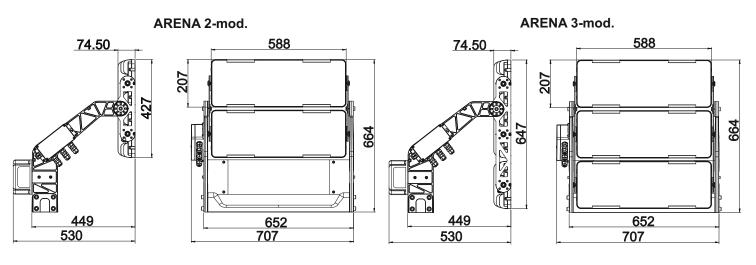


Mountng base dimmensions:

624.50

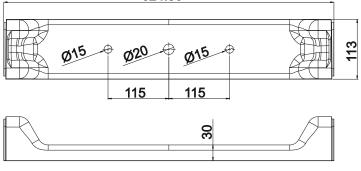




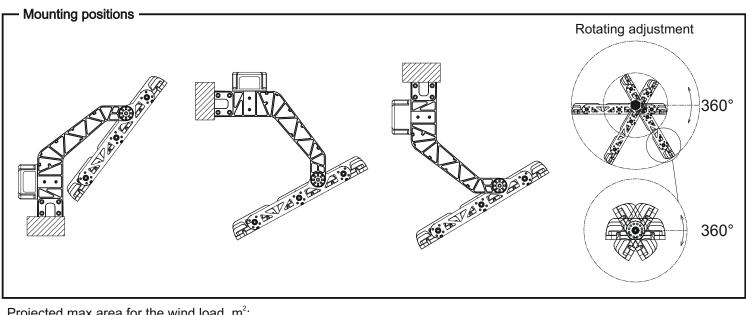

Projected max area for the wind load, m²:

3	,						
Angle to the ground	0°	15°	30°	45°	60°	75°	90°
ARENA 2-mod. without driver	0.07	0.13	0.19	0.23	0.27	0.29	0.30
ARENA 2-mod. with driver	0.16	0.22	0.28	0.32	0.36	0.38	0.39
ARENA 3-mod. without driver	0.07	0.16	0.25	0.32	0.38	0.41	0.42
ARENA 3-mod. with driver	0.16	0.25	0.32	0.34	0.38	0.41	0.42

Parameter table:	ARENA 2-mod.	ARENA 3-mod.
Power	600 - 1100W	900 - 1650W
Weight without driver	23.8 kg	32.4 kg

 



Driver weight including fixing parts - 6.9kg.

						Initiasin current		
MCB	B/C 10A	B/C 16A	B/C 20A	B/C 25A	B/C 32A	Ipeak, A	Duration	
ARENA 2-head	1	2	3	3	4	20	1.32 ms	
ARENA 3-head	1	1	2	2	3	20	1.32 ms	

Wrong positioning.

The light source cannot be directed to other luminaire or it parts.

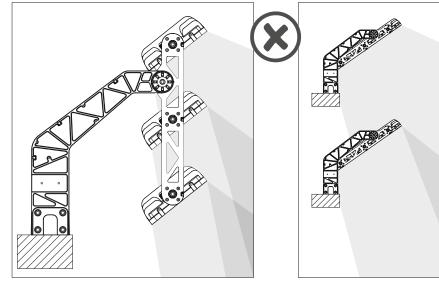


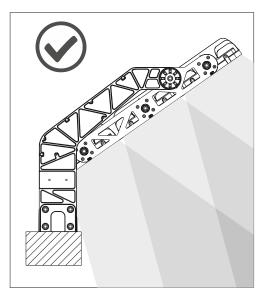




http://www.enimlighting.com The information in this document is subject to change without notice. Inrush current


Assembling

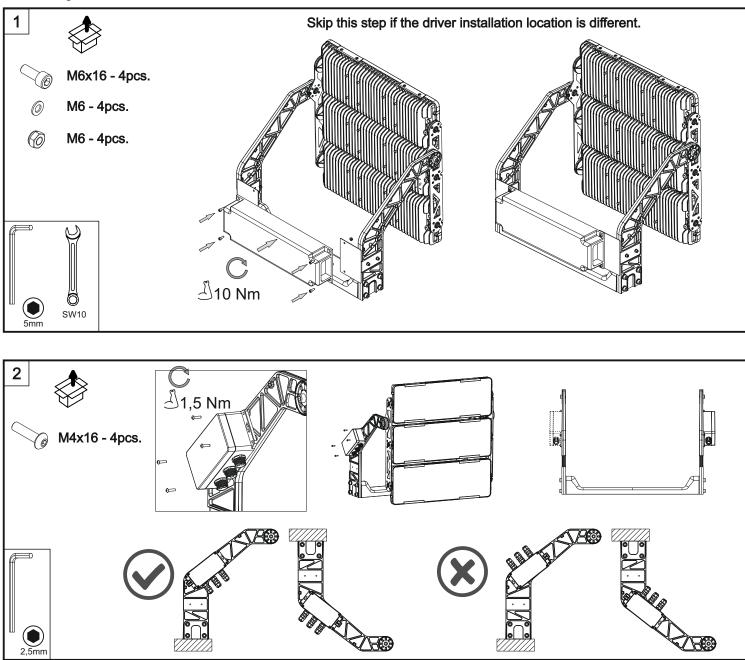


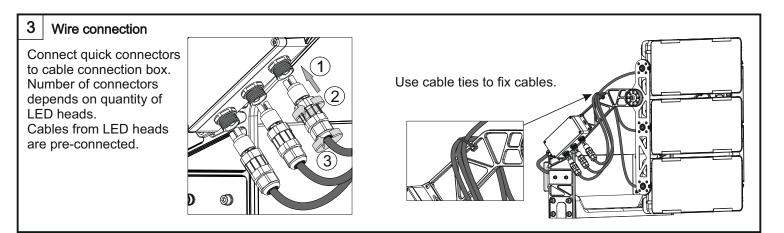




Safety cable installation

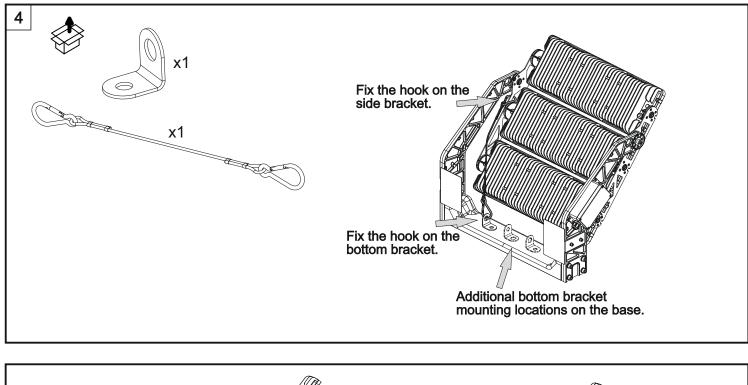

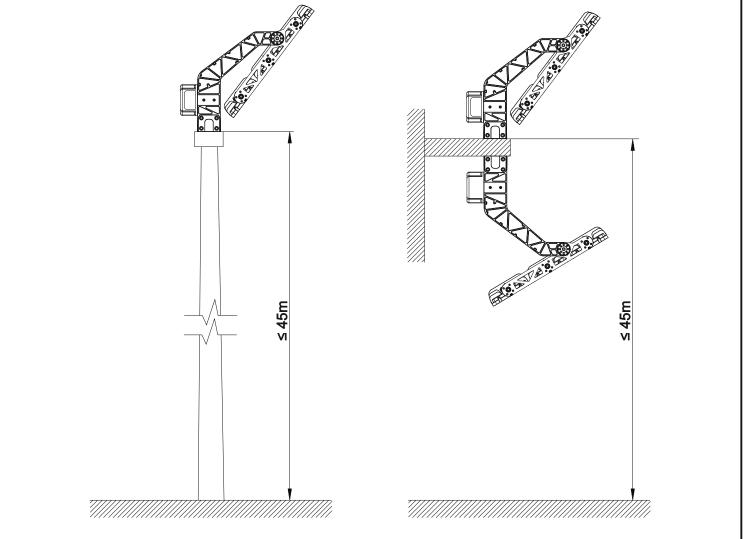




Power supply: Type A

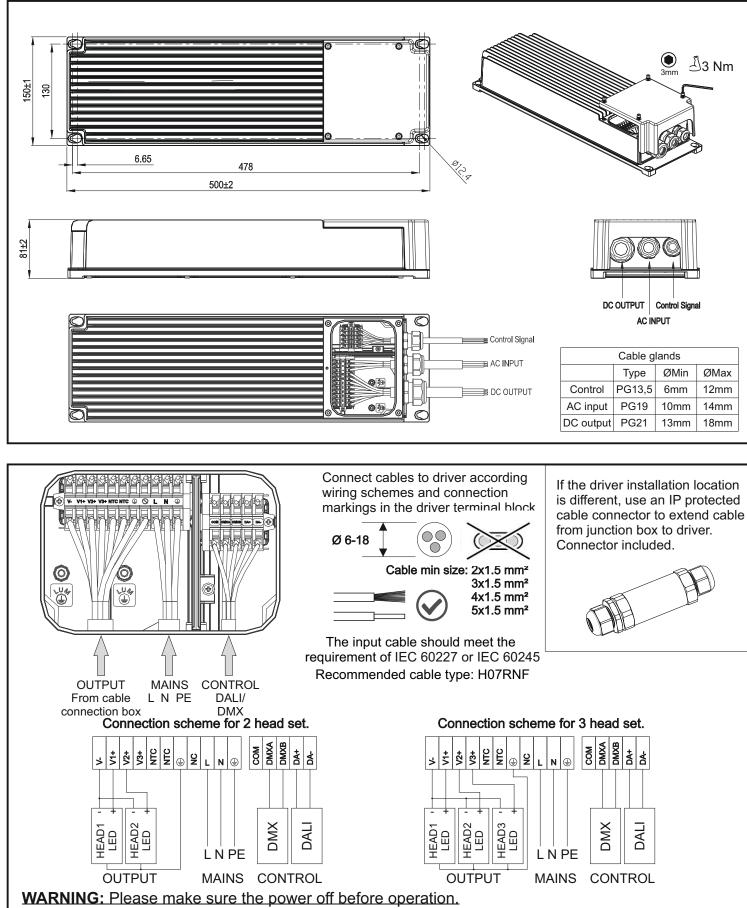





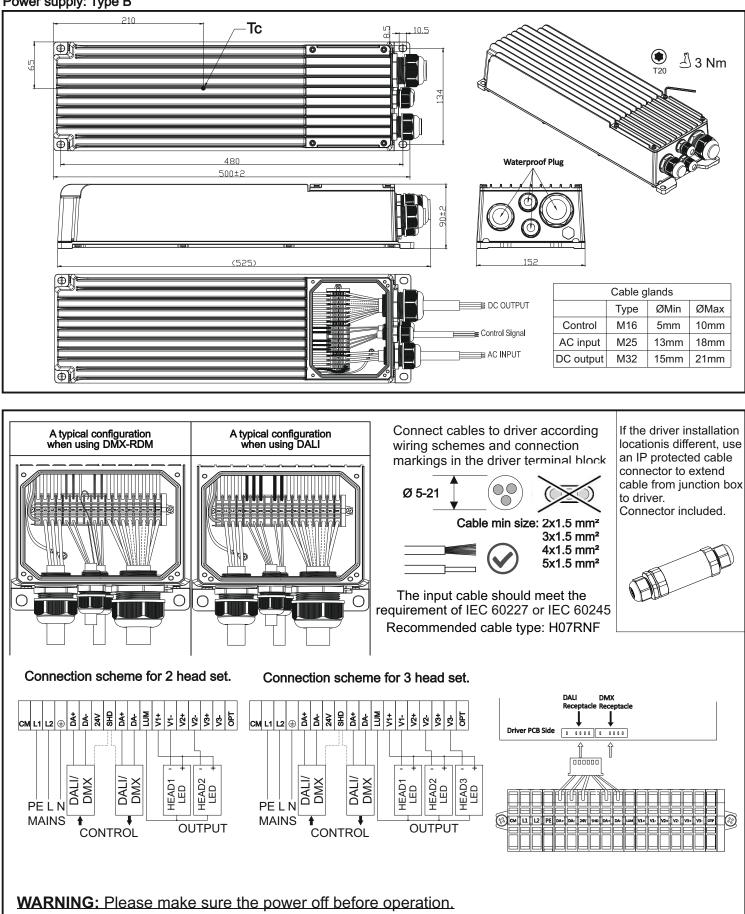

G н 2025-01-15